

160512 - 00

NOTICE DE
MONTAGE

INSTRUCCIONES
DE MONTAJE

MONTAGEANLEITUNG

ASSEMBLY
INSTRUCTIONS



ISTRUZIONI DI
MONTAGGIO

MONTAGEVOORSCHRIFT

INSTRUÇÕES
DE MONTAGEM



INSTRUKCJA
MONTAŻU

NAPUTCI ZA
MONTAŽU

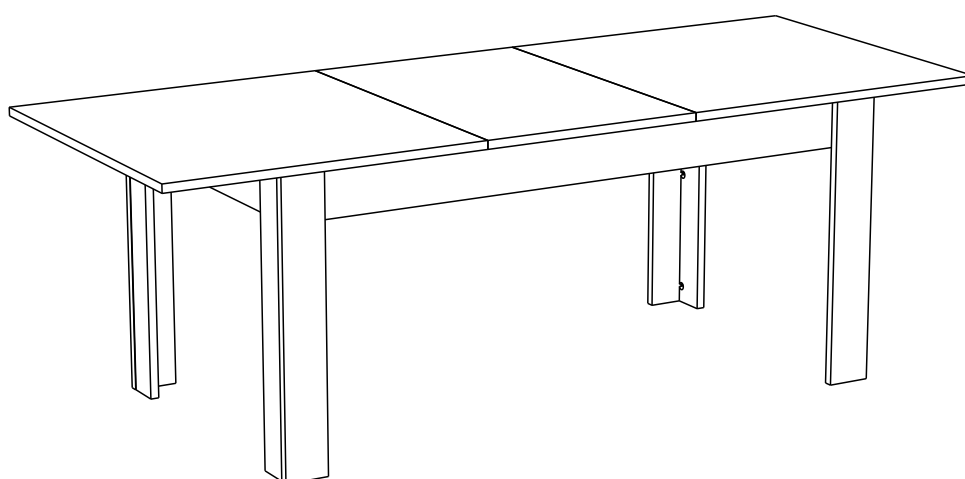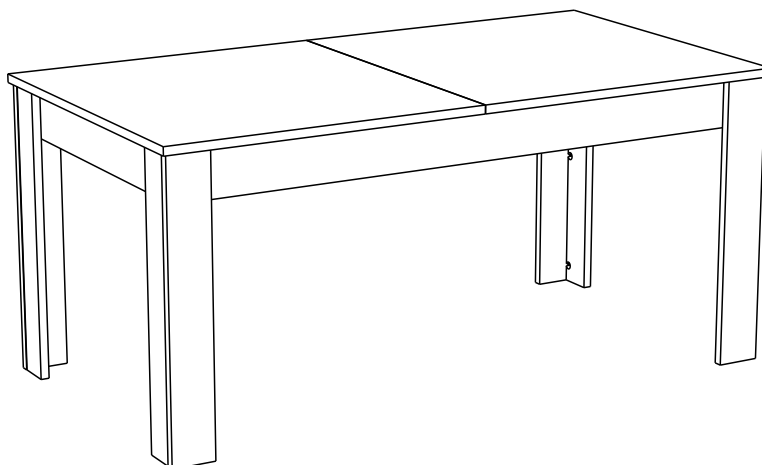

1H 15 Mn




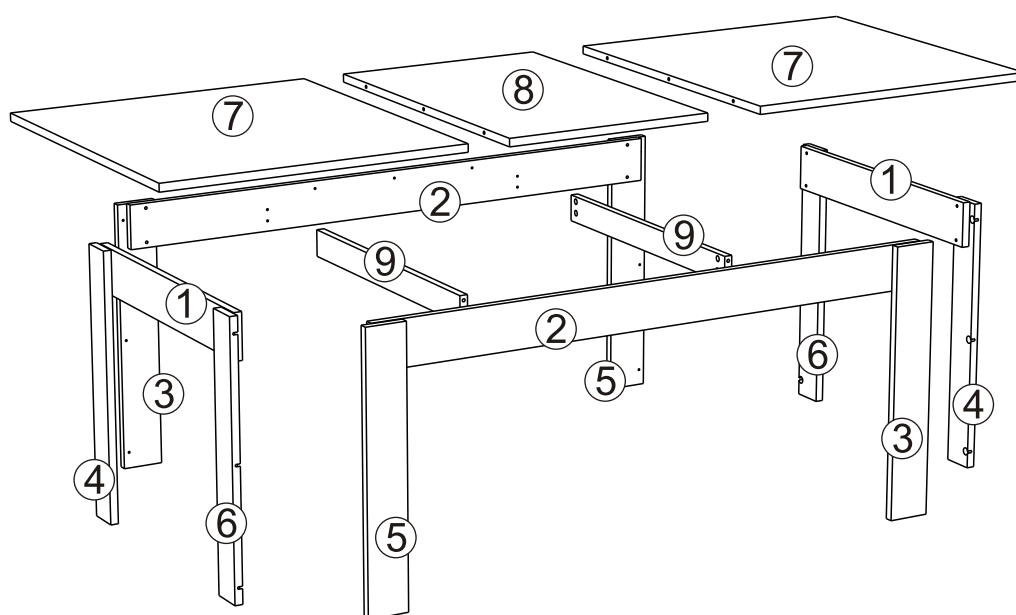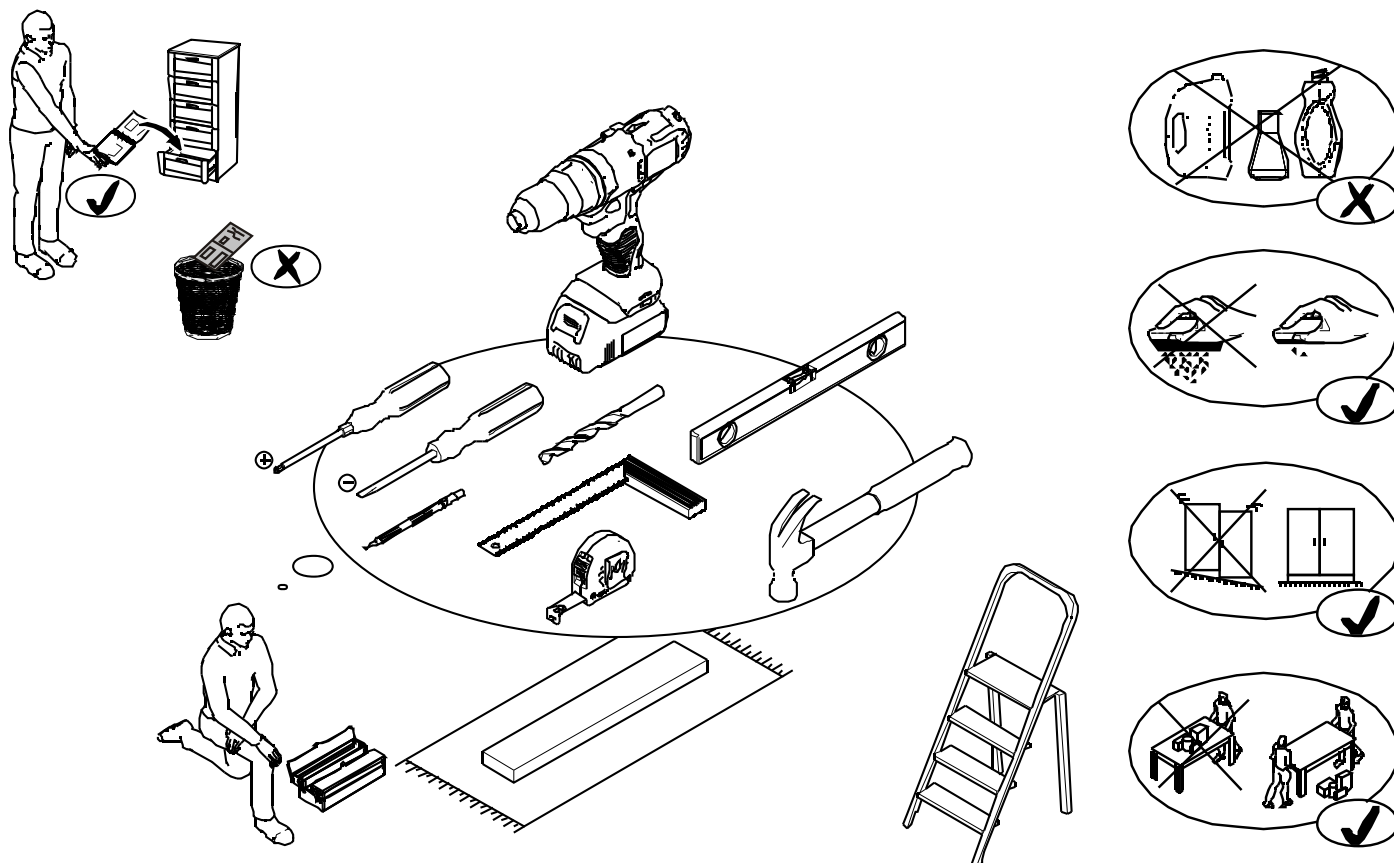



REP	DIM	QTE
1	792x125	2
2	1626x125	2
3	749x113	2
4	749x91	2
5	749x113	2
6	749x91	2
7	850x900	2
8	590x900	1
9	792x74	2


70	X8	71	X8	931	X16	510	X16	944	X16	84	X12	907	X16
353051	X4	524	X2	340159	X12	77	X6	78	X6	916	X12	4010	X4
352035	X1												




1	352035	X1	944	X6
			 6.3*13	

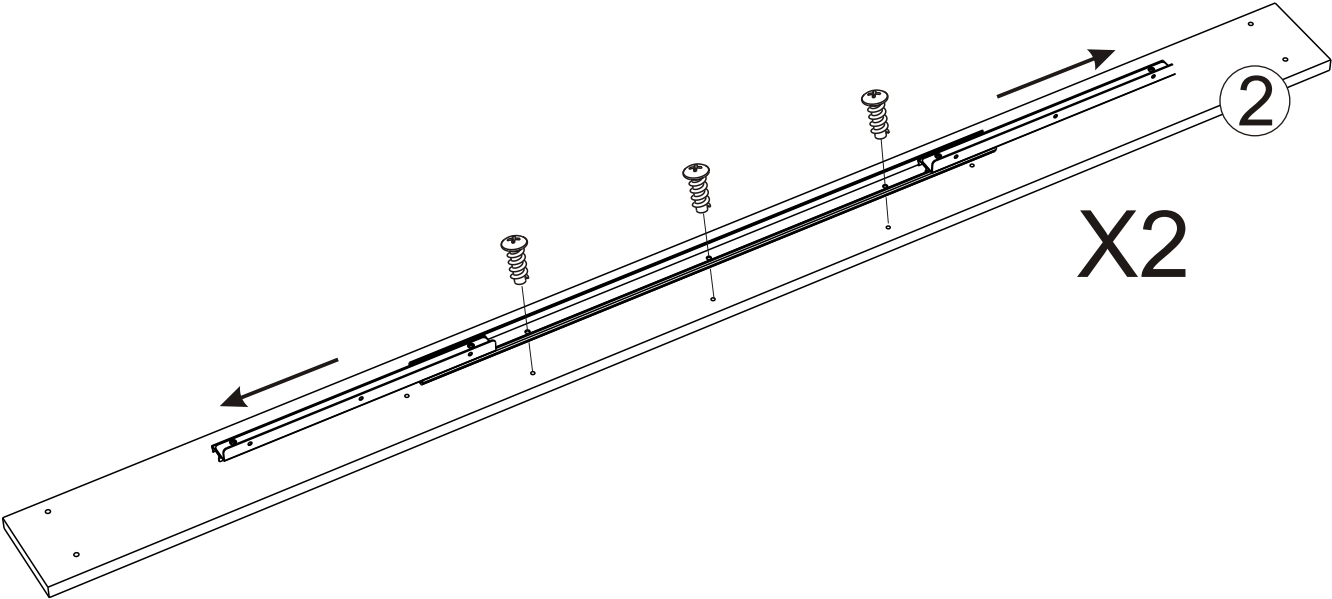


2	70	X8
		

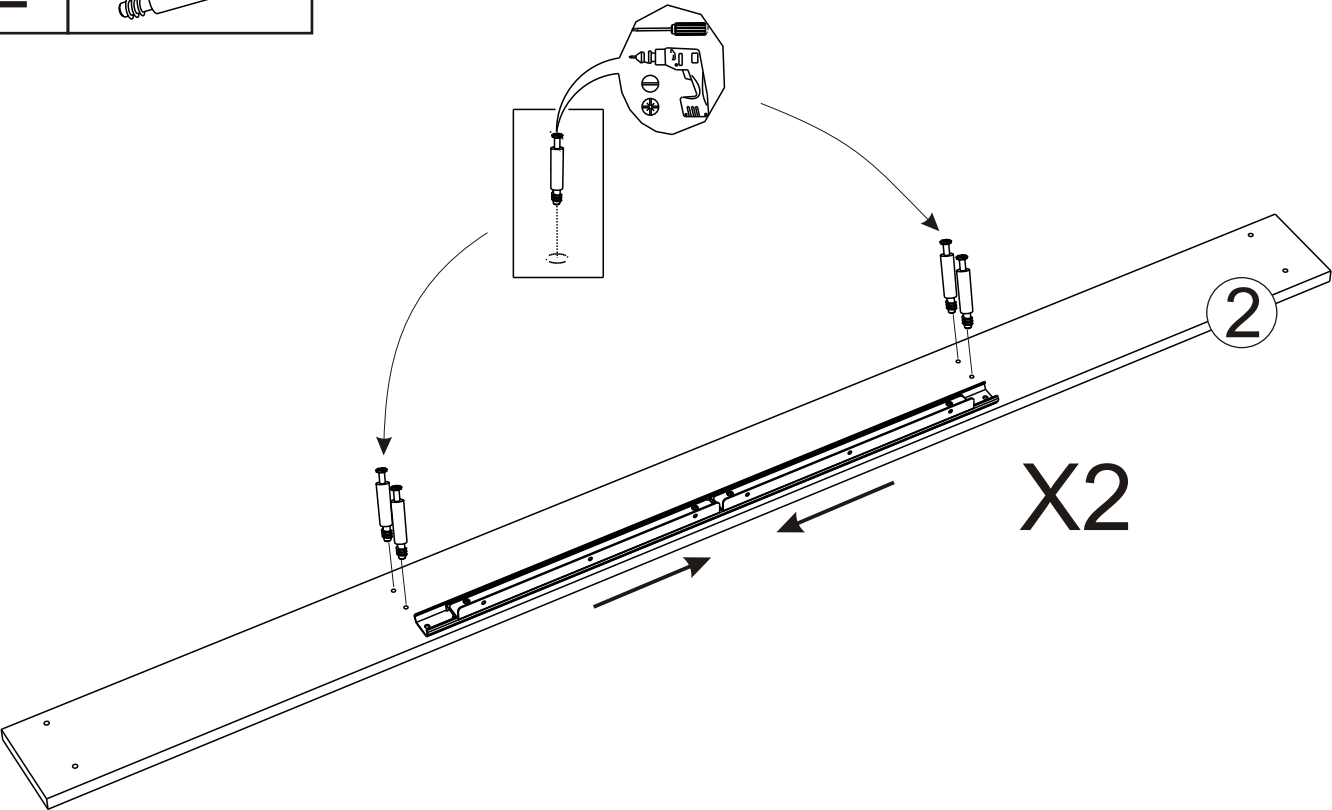

3	71	X8
	 Ø15	

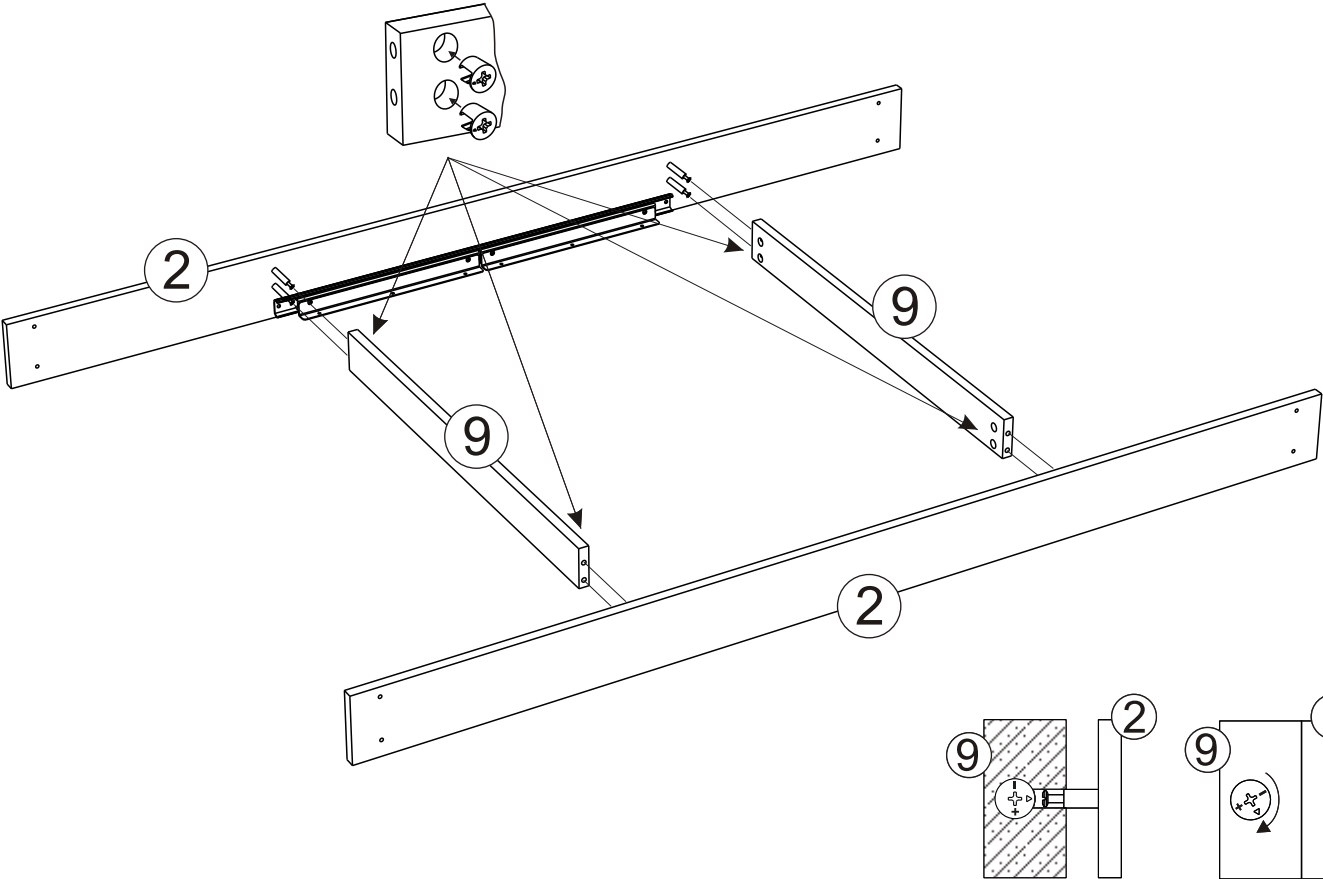


4	84	X12	510	X8
				

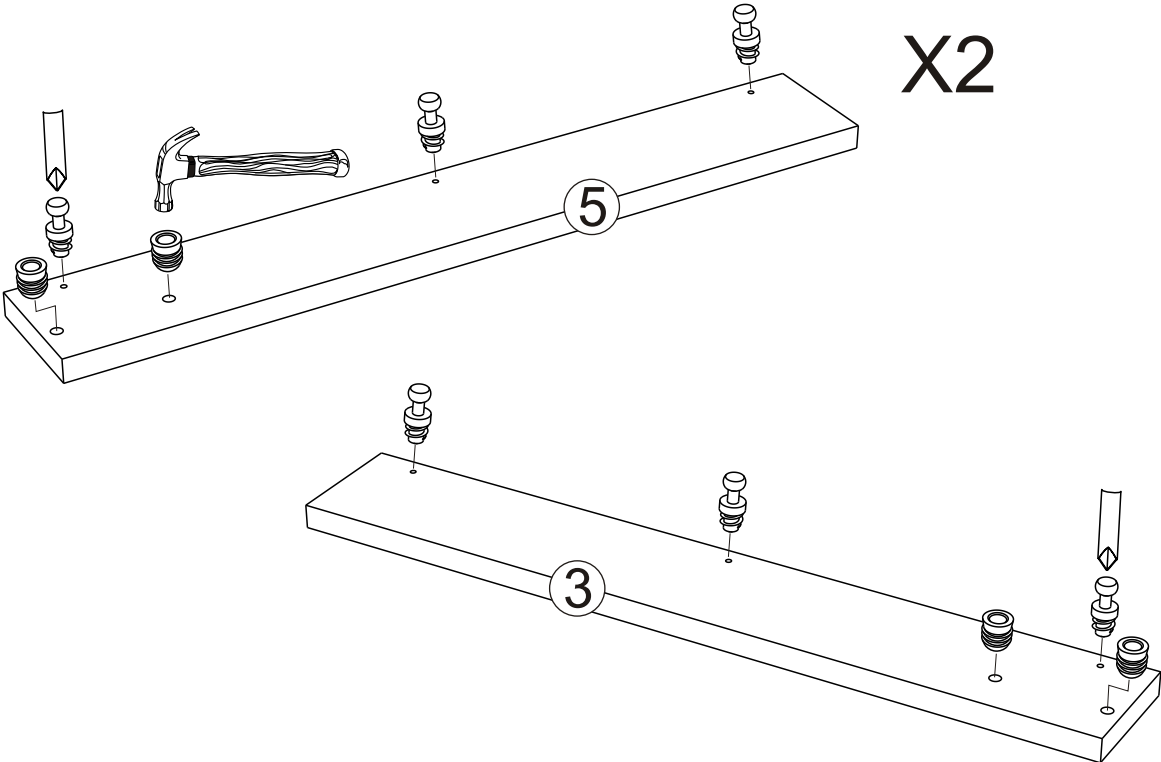


X2

5	340159	X12	510	X8
				

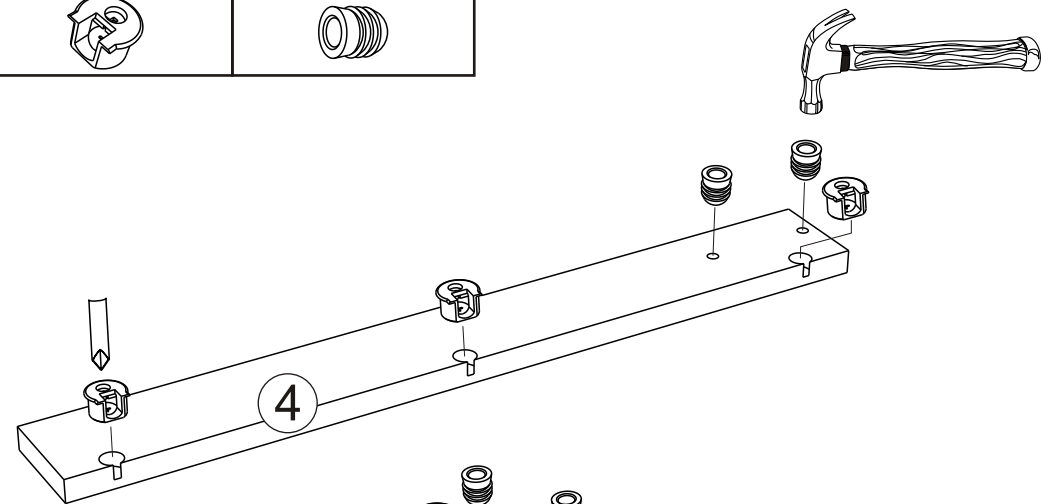


X2


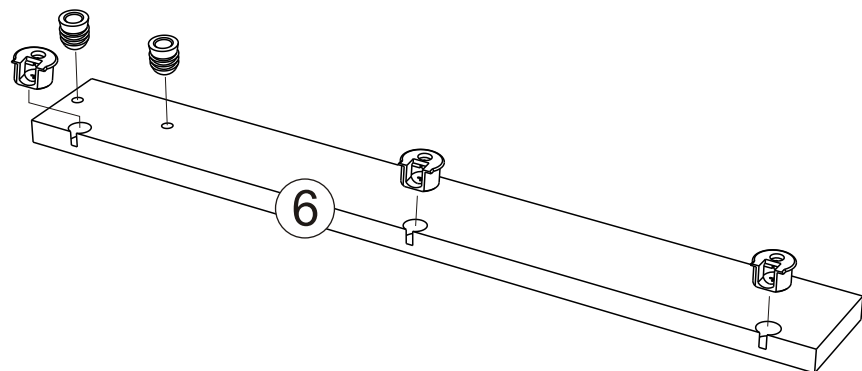


X2


6

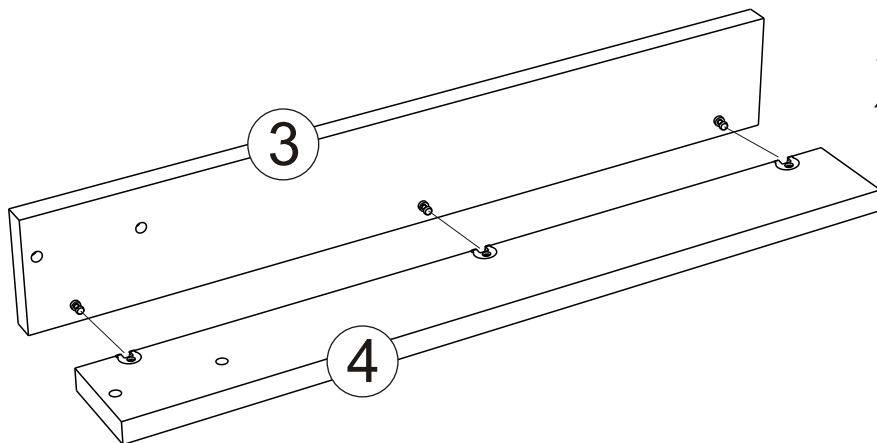




X2

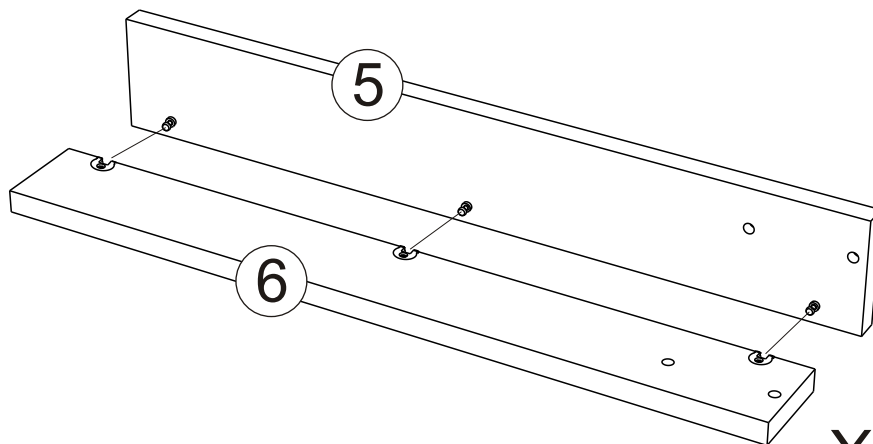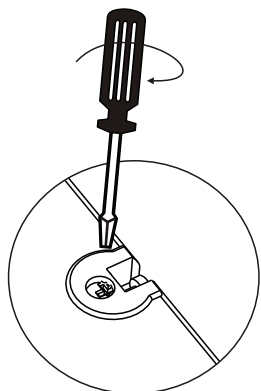


X2

7	907	X8	353051	X2	77	X3	78	X3
								Ø8

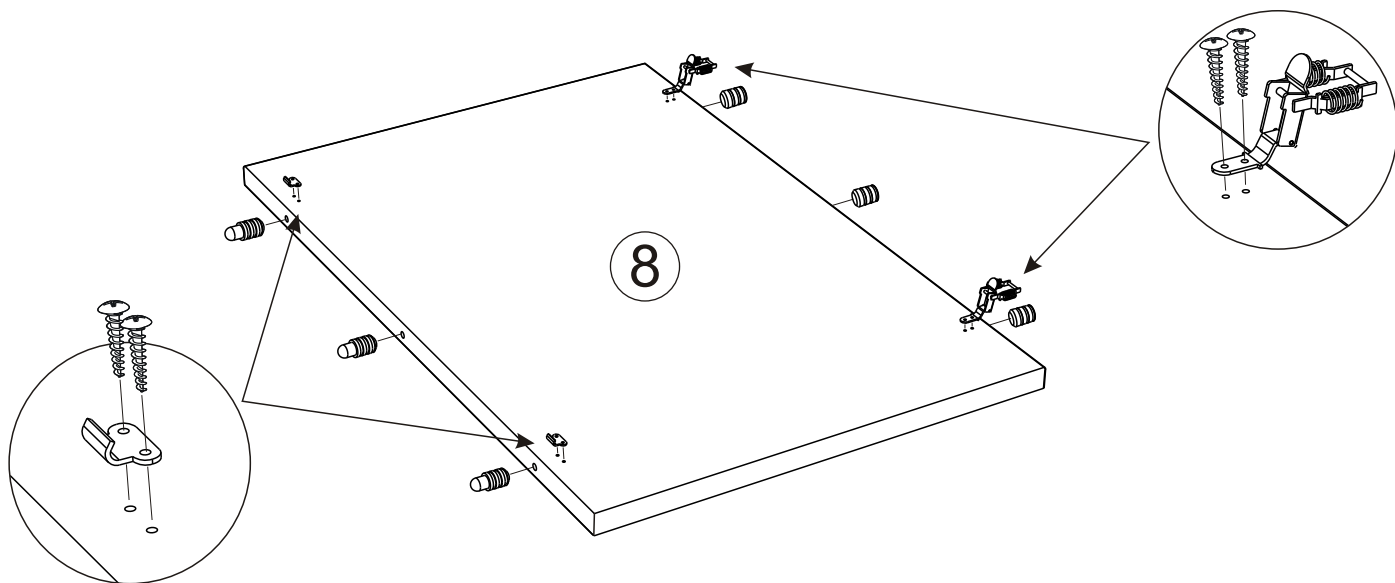


8	907	X8	353051	X2	77	X3	78	X3	4010	X4	524	X2
								Ø8				


944	X10
	6.3*13

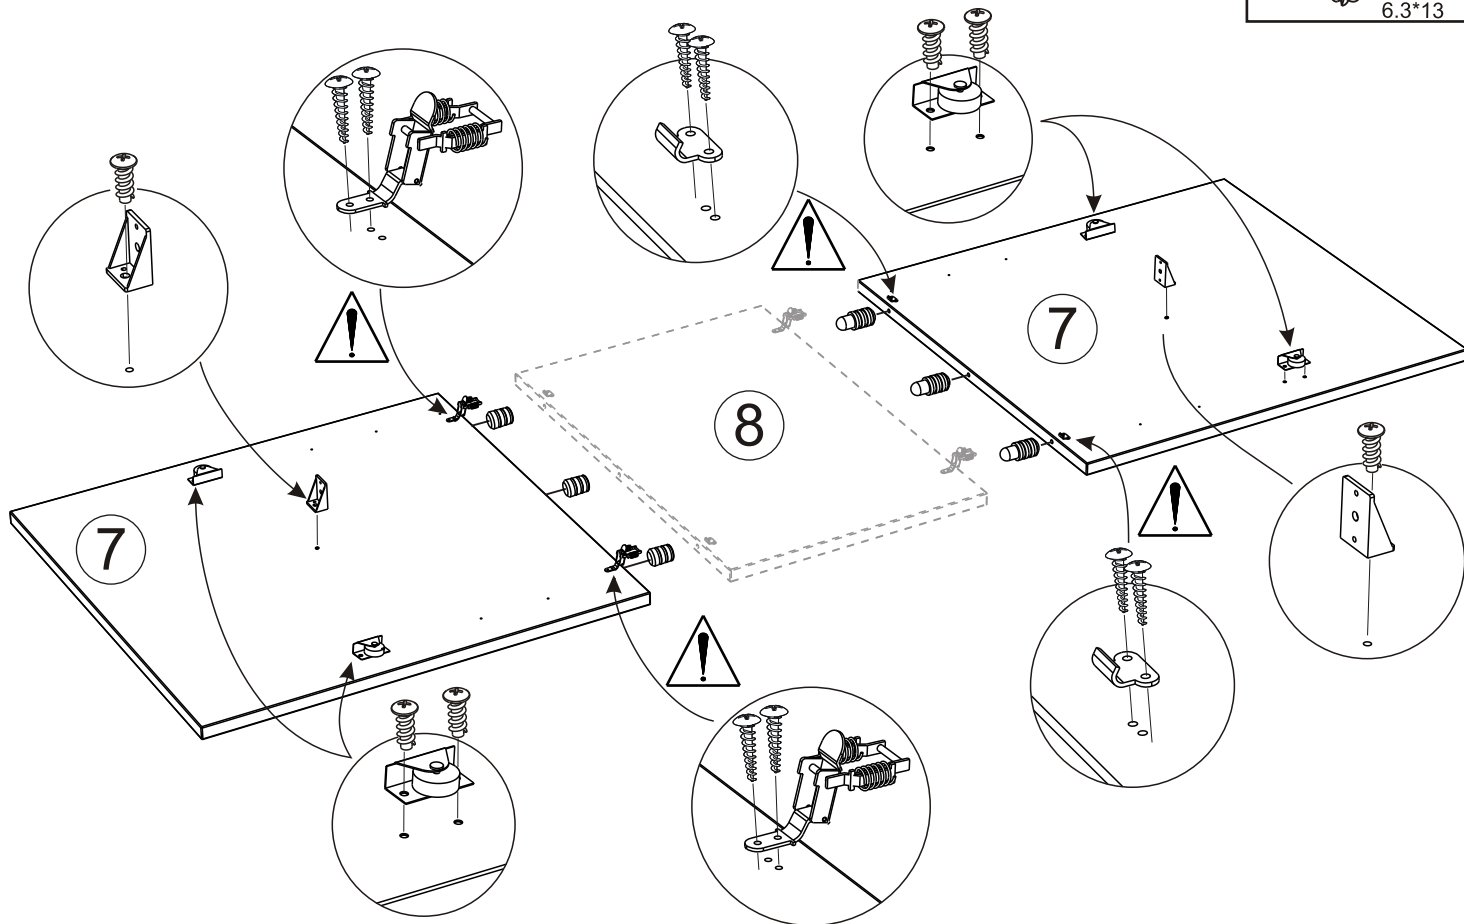


9	916	X12
	 4x13	

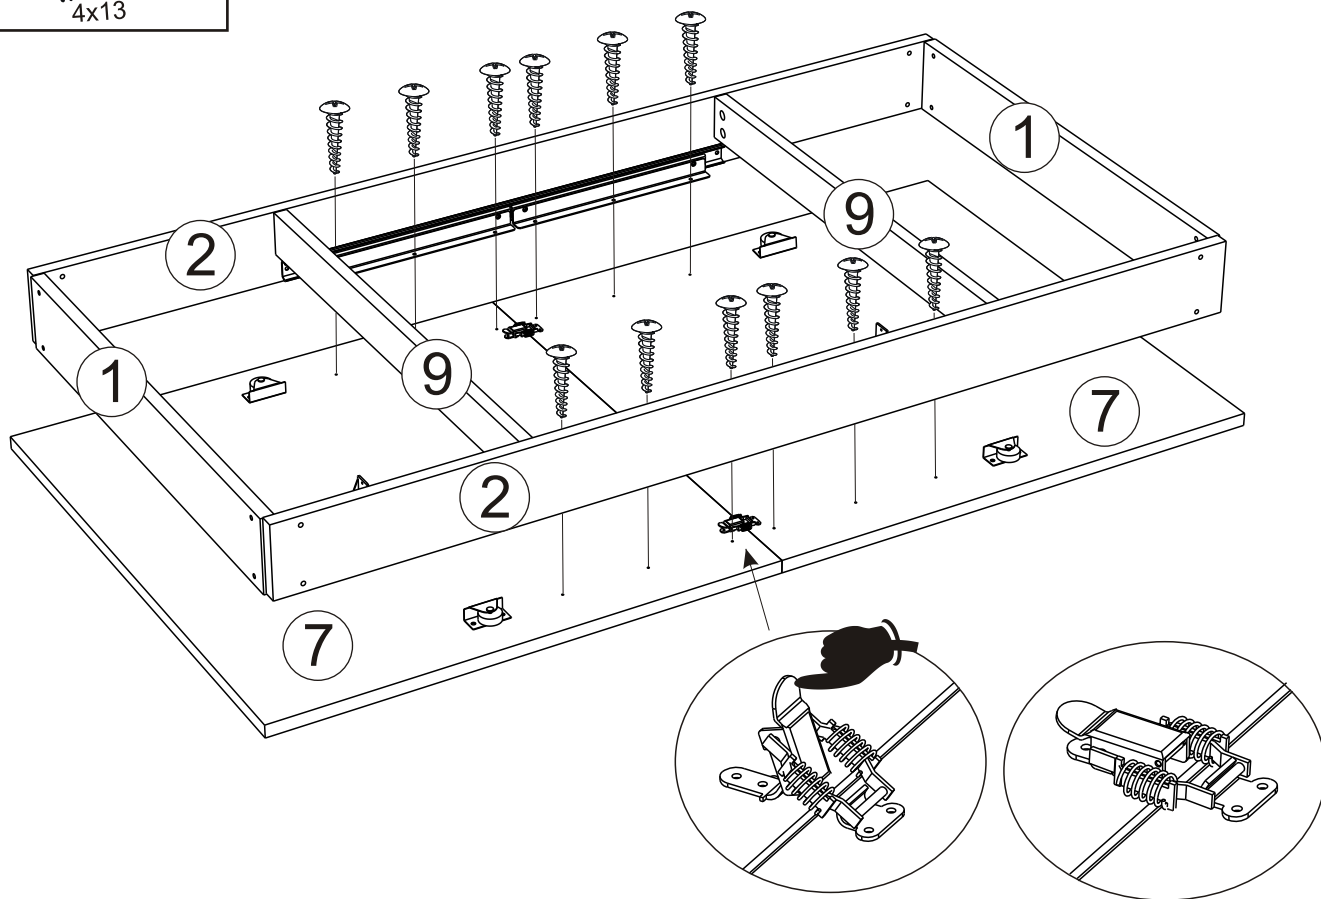


10	931	X16
	 M6*30	

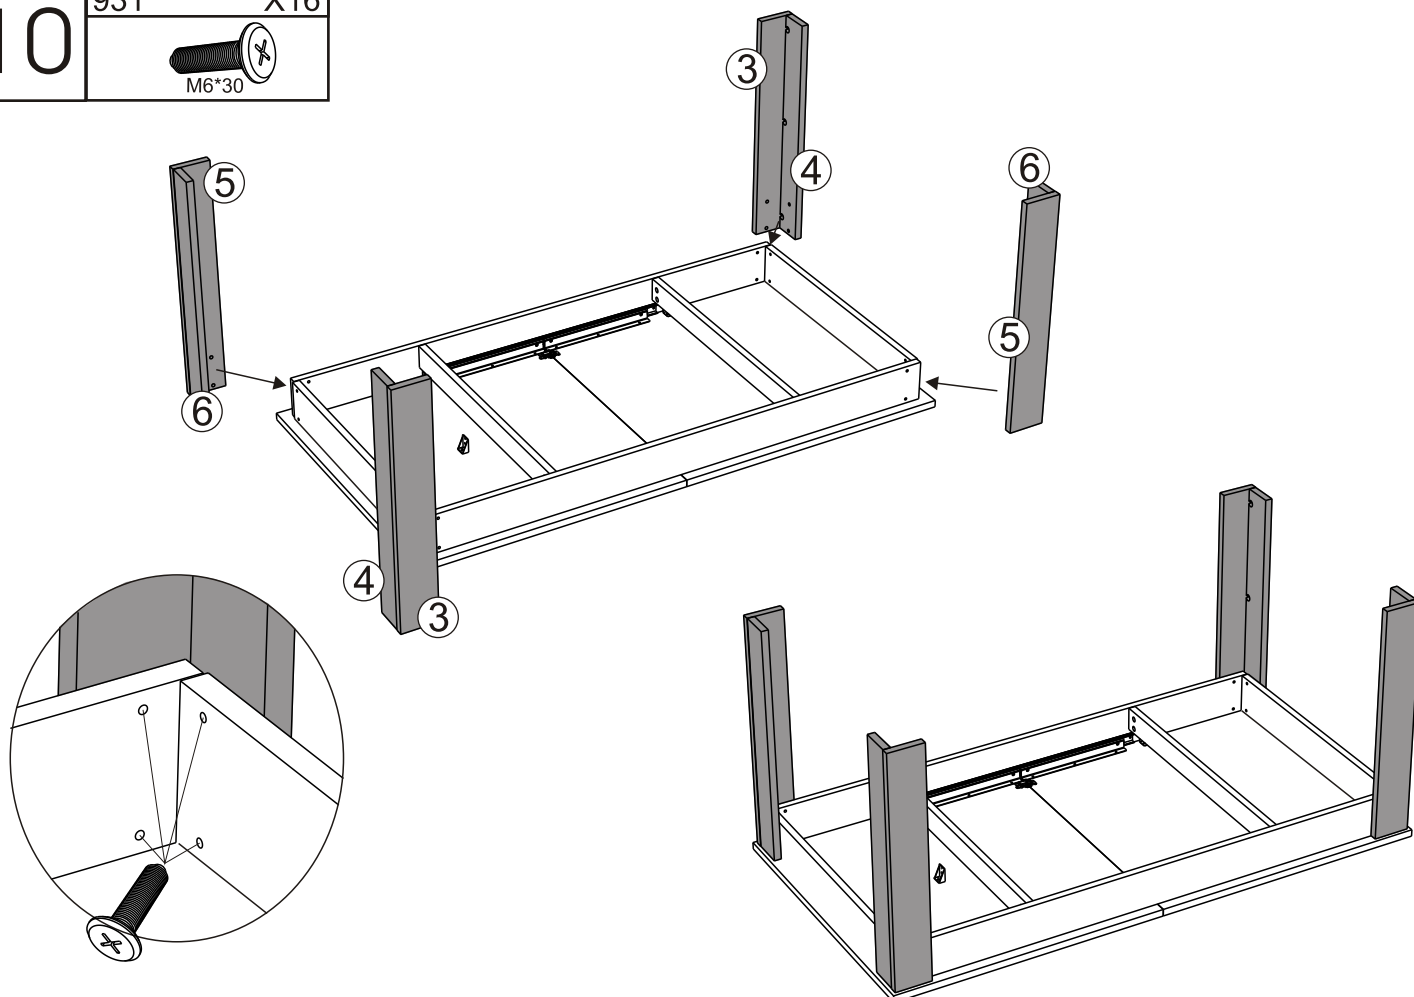


A

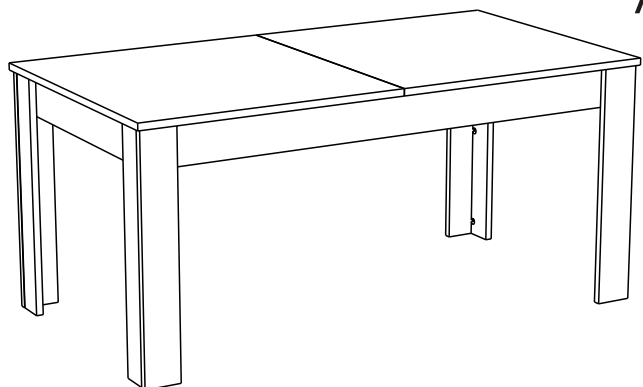


B

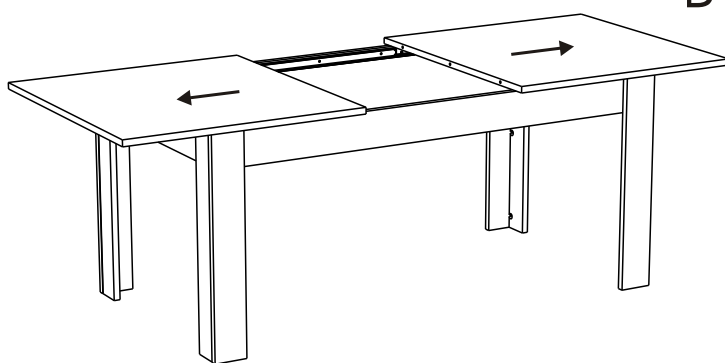


C

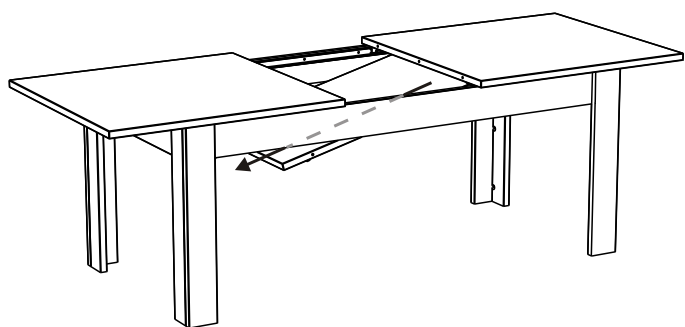


D

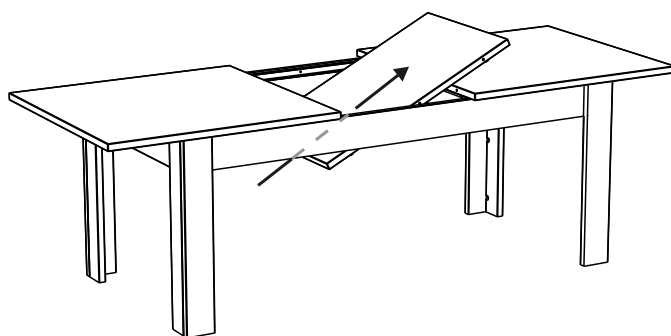

E

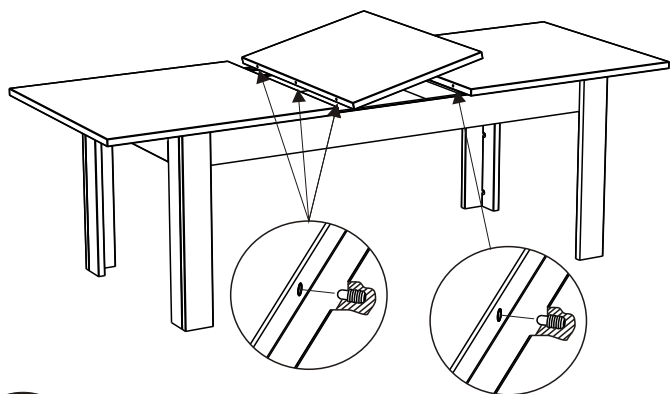

F

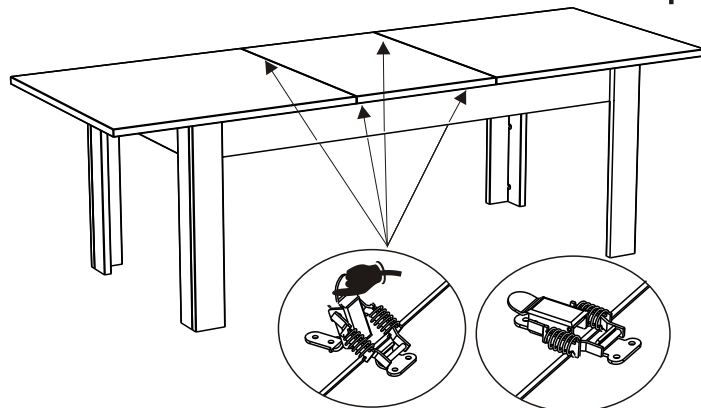

Info tri déchets

www.quefairedemesdechets.fr