

NOTICE DE
MONTAGE

INSTRUCCIONES
DE MONTAJE

MONTAGEANLEITUNG

ASSEMBLY
INSTRUCTIONS


ISTRUZIONI DI
MONTAGGIO

MONTAGEVOORSCHRIFT


INSTRUÇÕES
DE MONTAGEM

INSTRUKCJA
MONTAŻU






NAPUTCI ZA
MONTAŽU





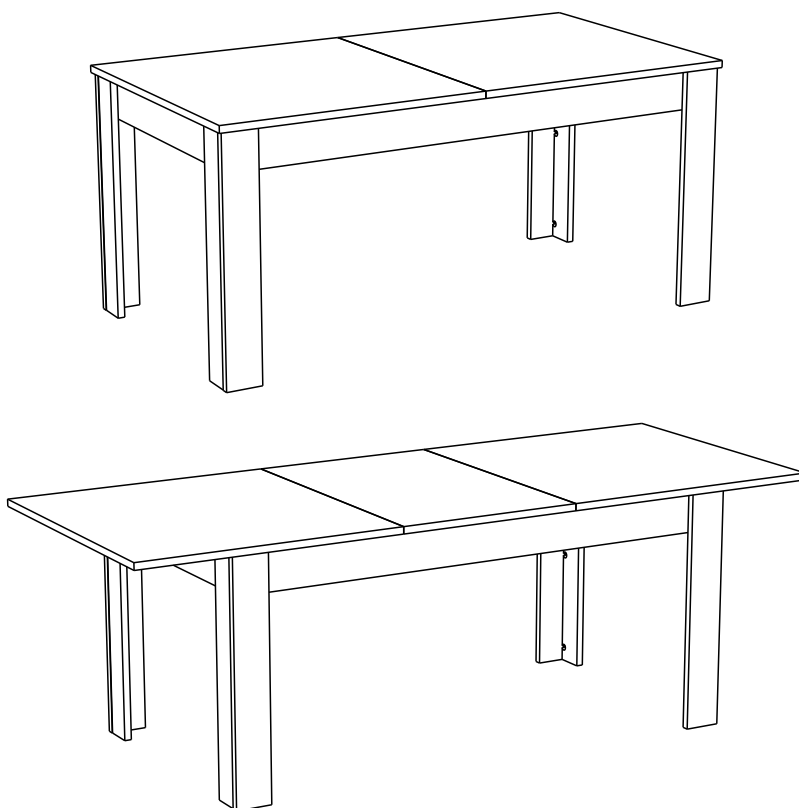



1h 15 Mn

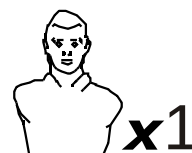

x1

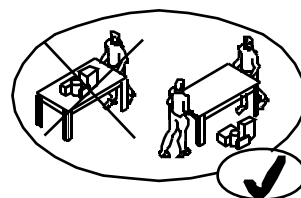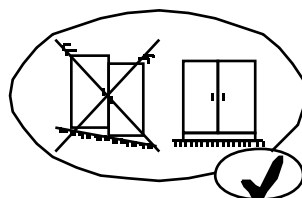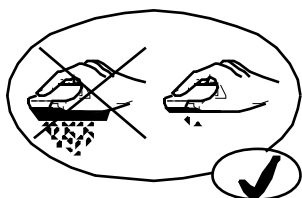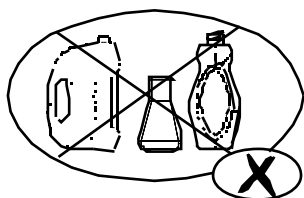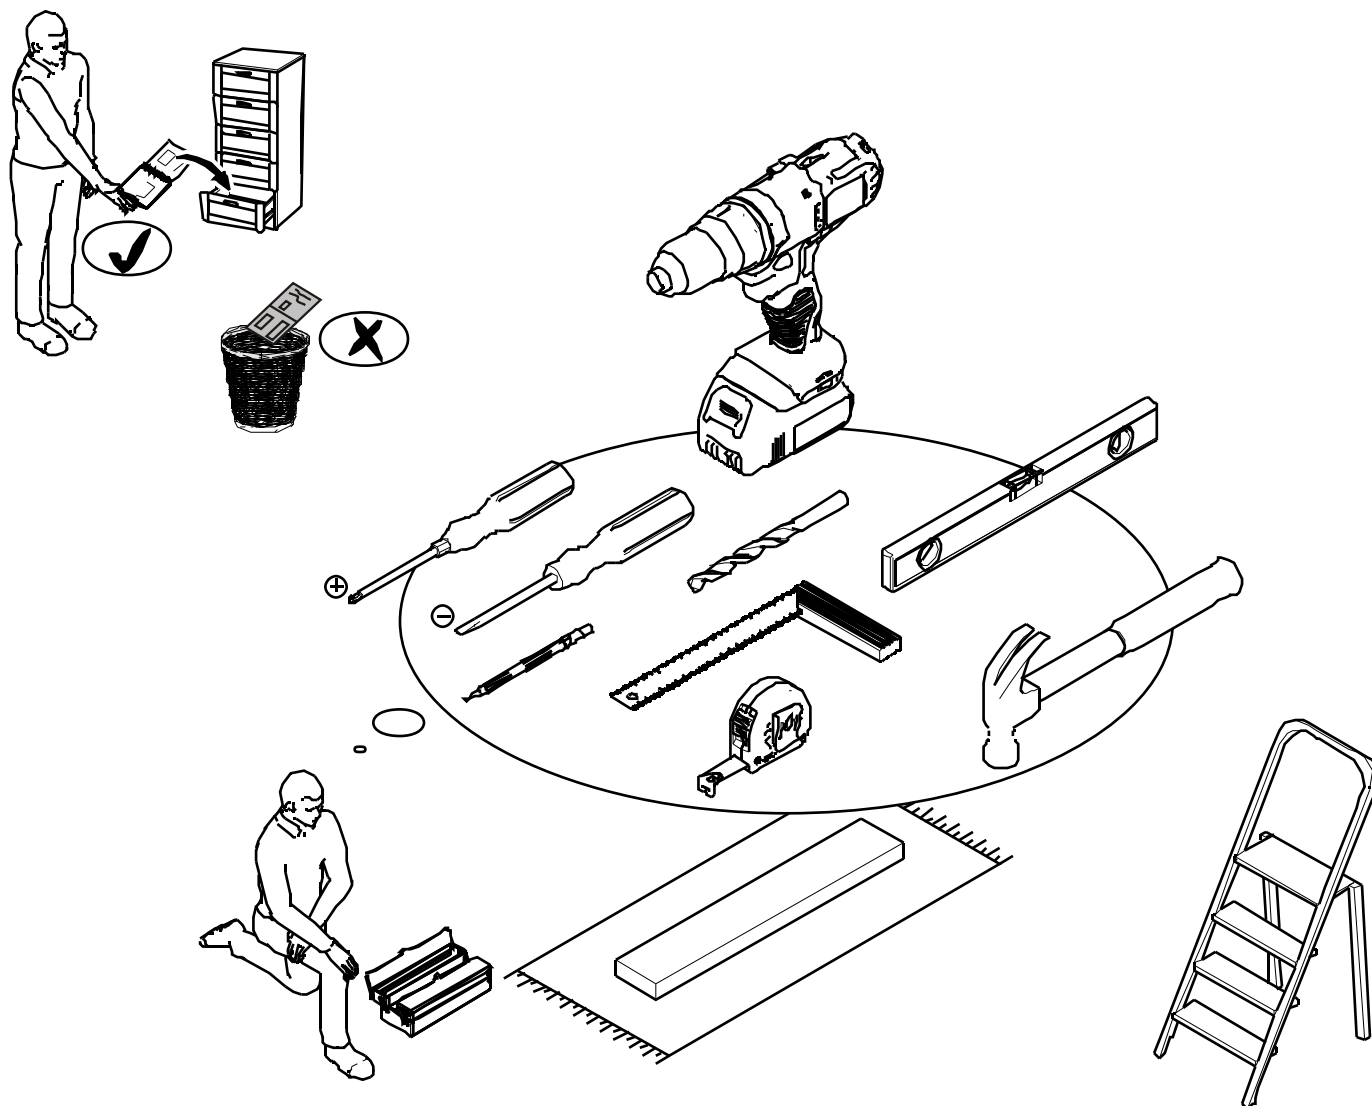


70	X8	71	X8	931	X16	510	X16	944	X16	84	X12	353051	X4
				 M6*30				 6.3*13					
524	X2	340159	X12	77	X6	78	X6	916	X12	907	X16	4010	X4
						 Ø8		 4x13		 3x16			
352035				X1									
													

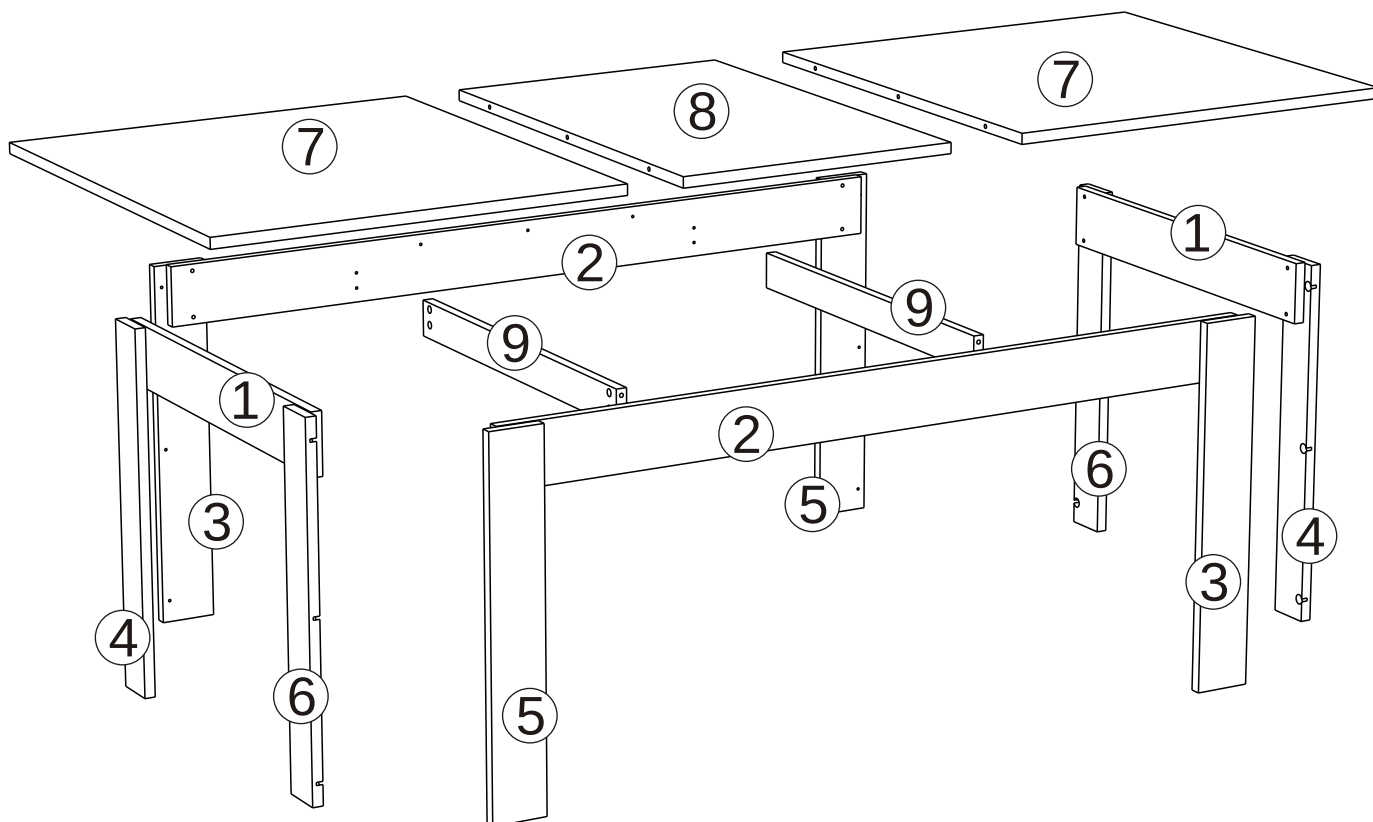


REP	DIM	QTE
1	792x123	2
2	1626x123	2
3	749x113	2
4	749x91	2
5	749x113	2
6	749x91	2
7	850x900	2
8	590x900	1
9	792x74	2




1	352035 X1	944 X6 6.3*13
---	-----------	------------------

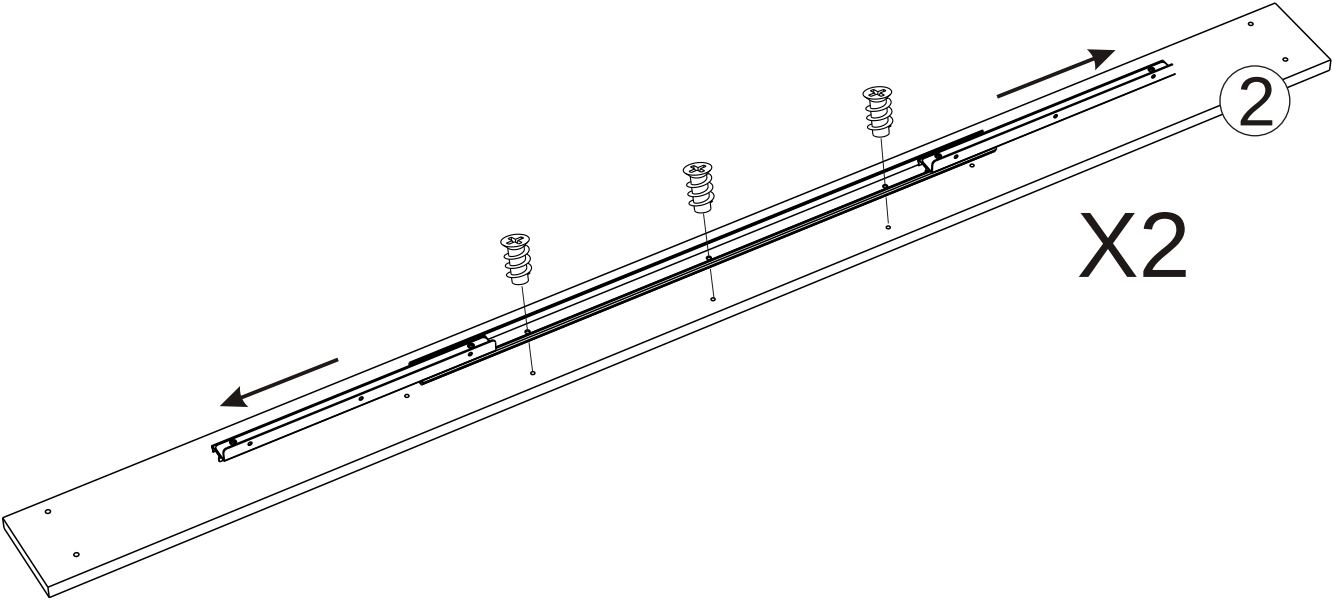



2	70 X8
---	-------

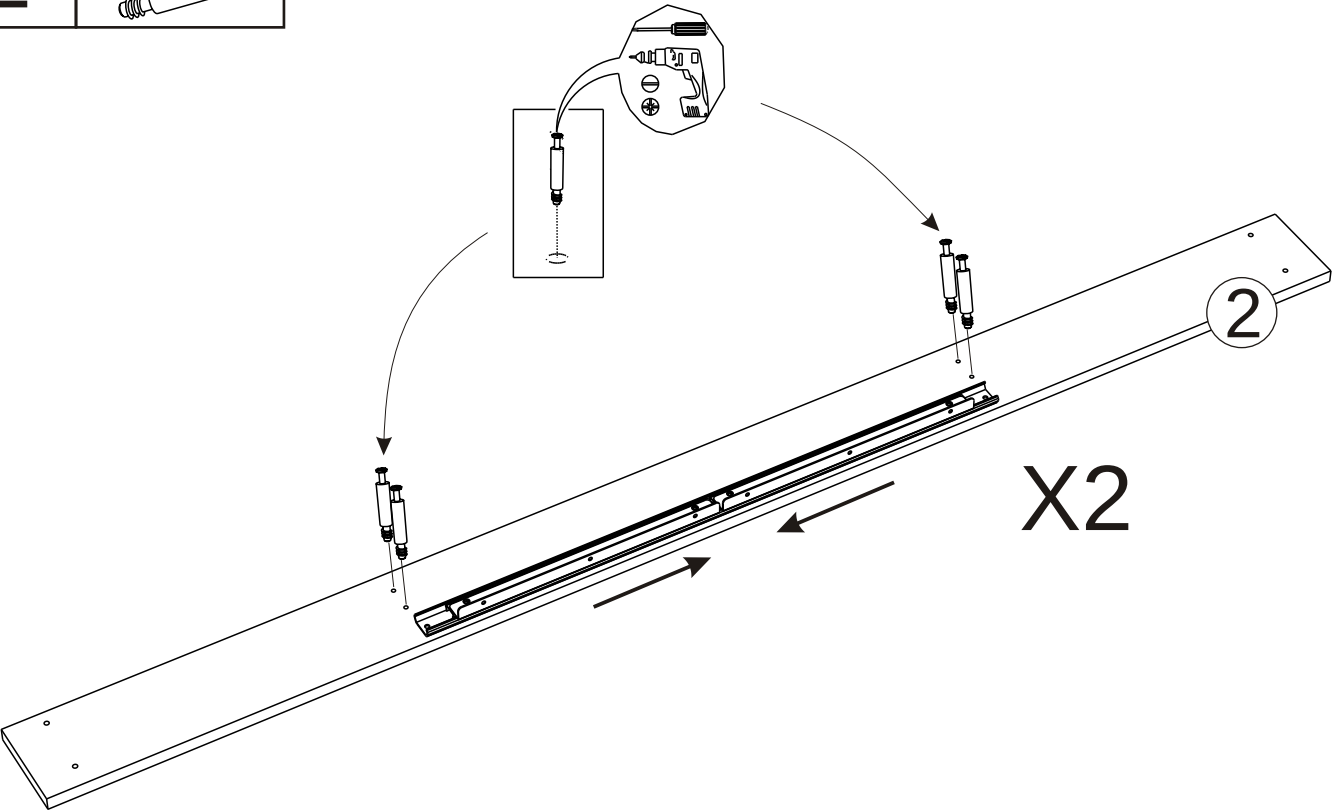

3	71 X8
---	-------

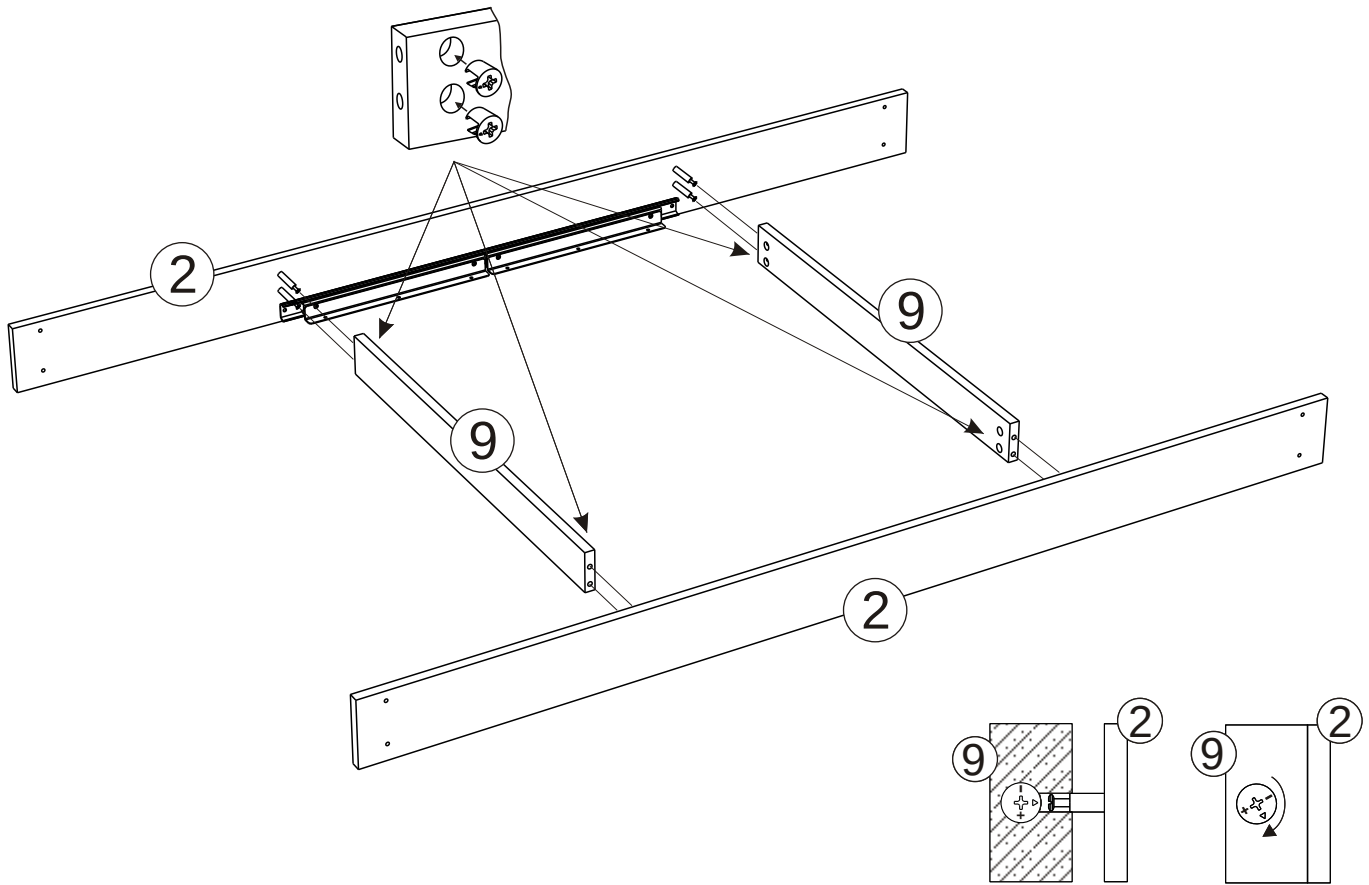


4	84 X12	510 X8
---	--------	--------

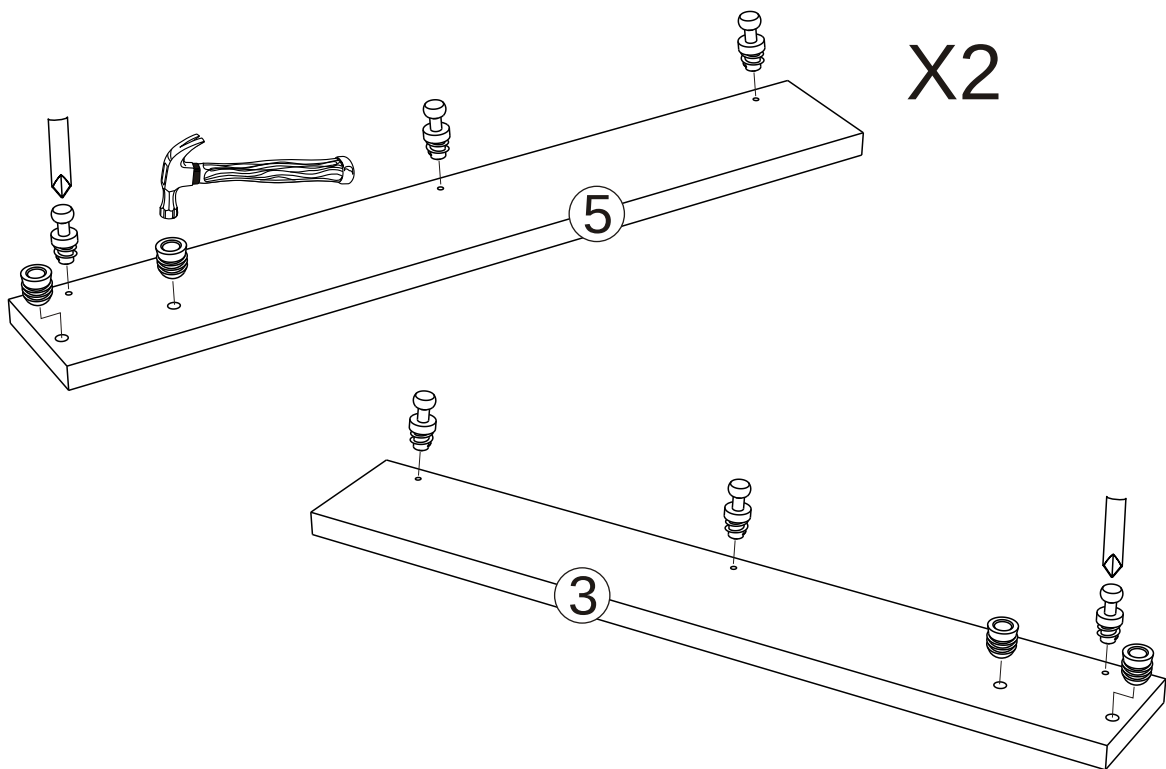


X2

X2


5	340159 X12	510	X8
			


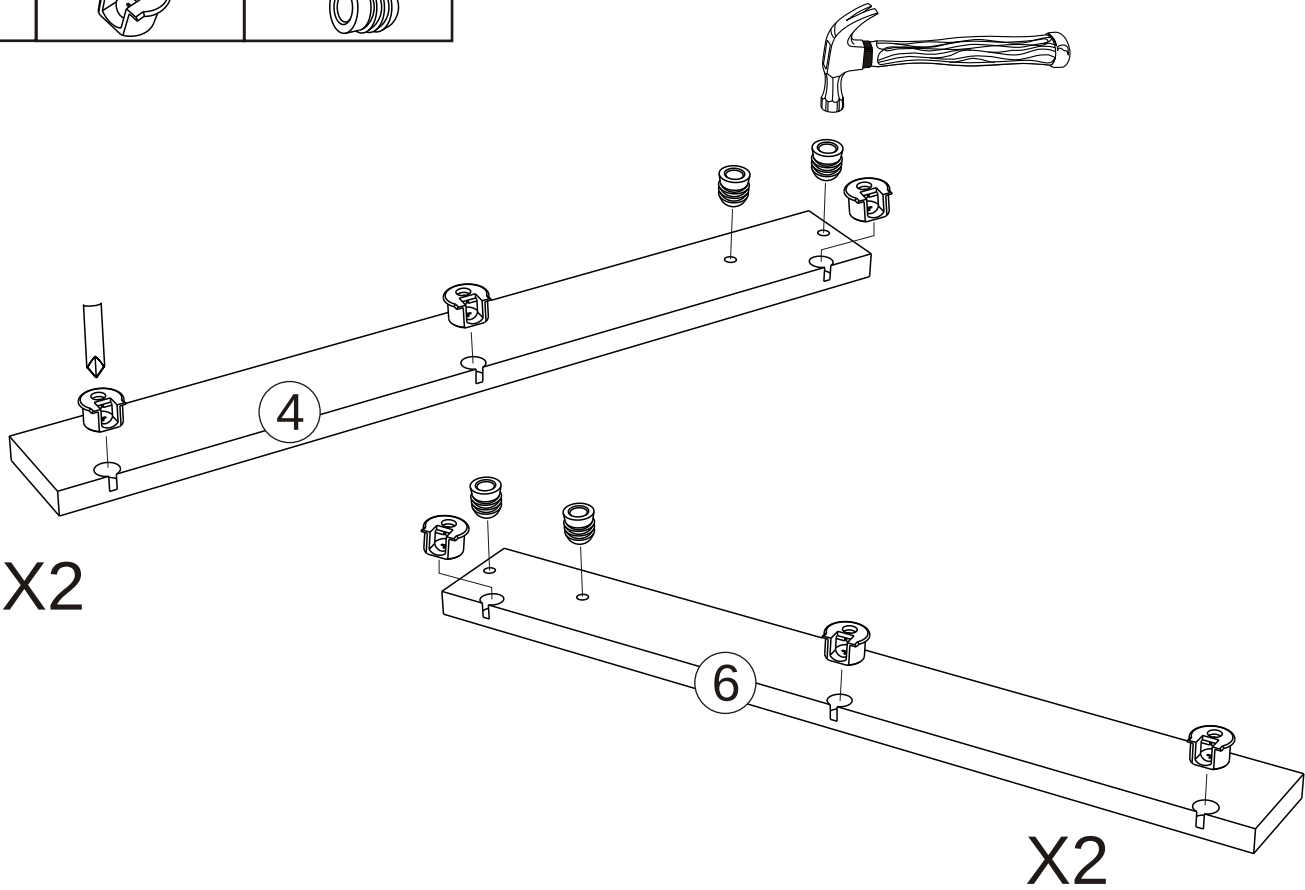



6

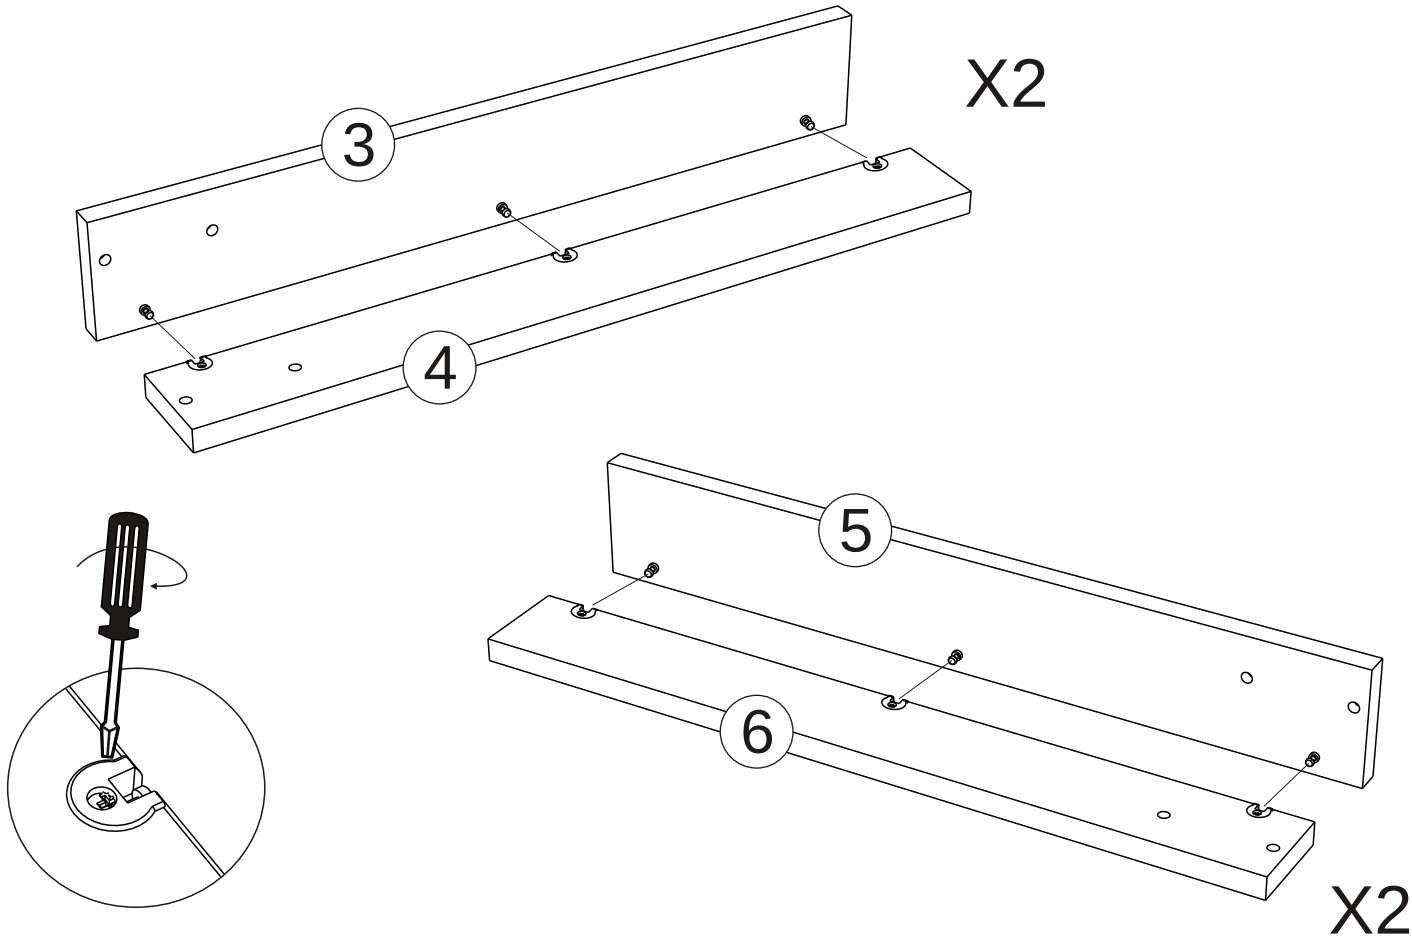


7	907	X8	353051	X2	77	X3	78	X3
								

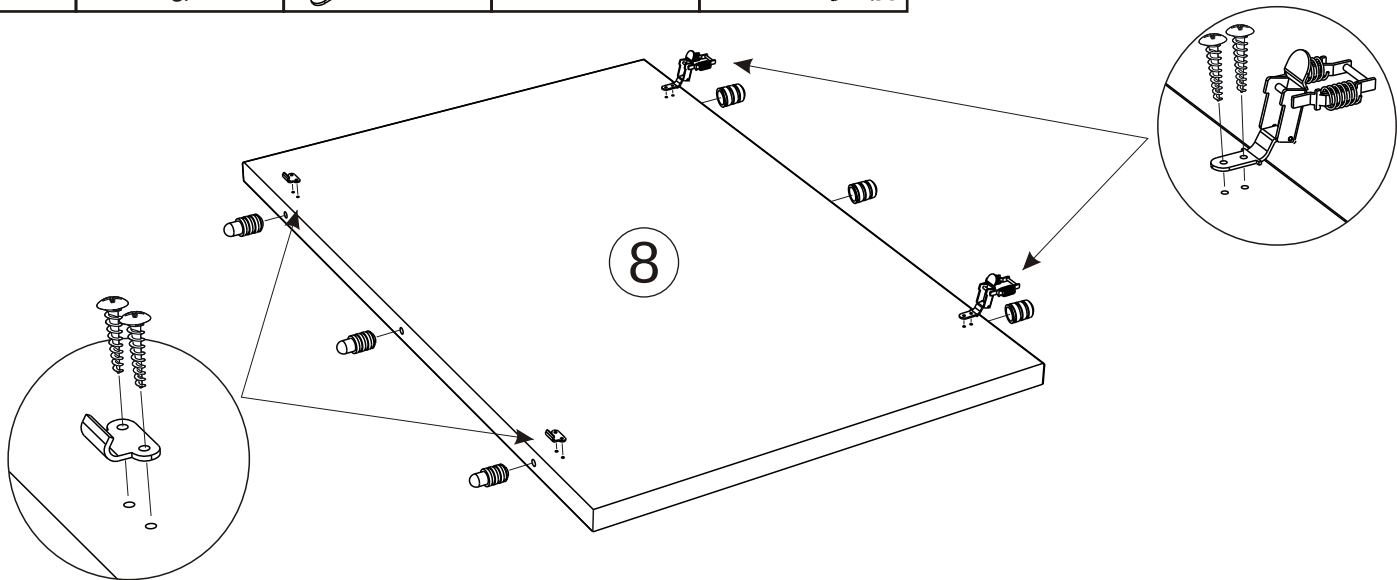



8	907	X8	353051	X2	77	X3	78	X3	4010	X4	524	X2
												
											944	X10
												

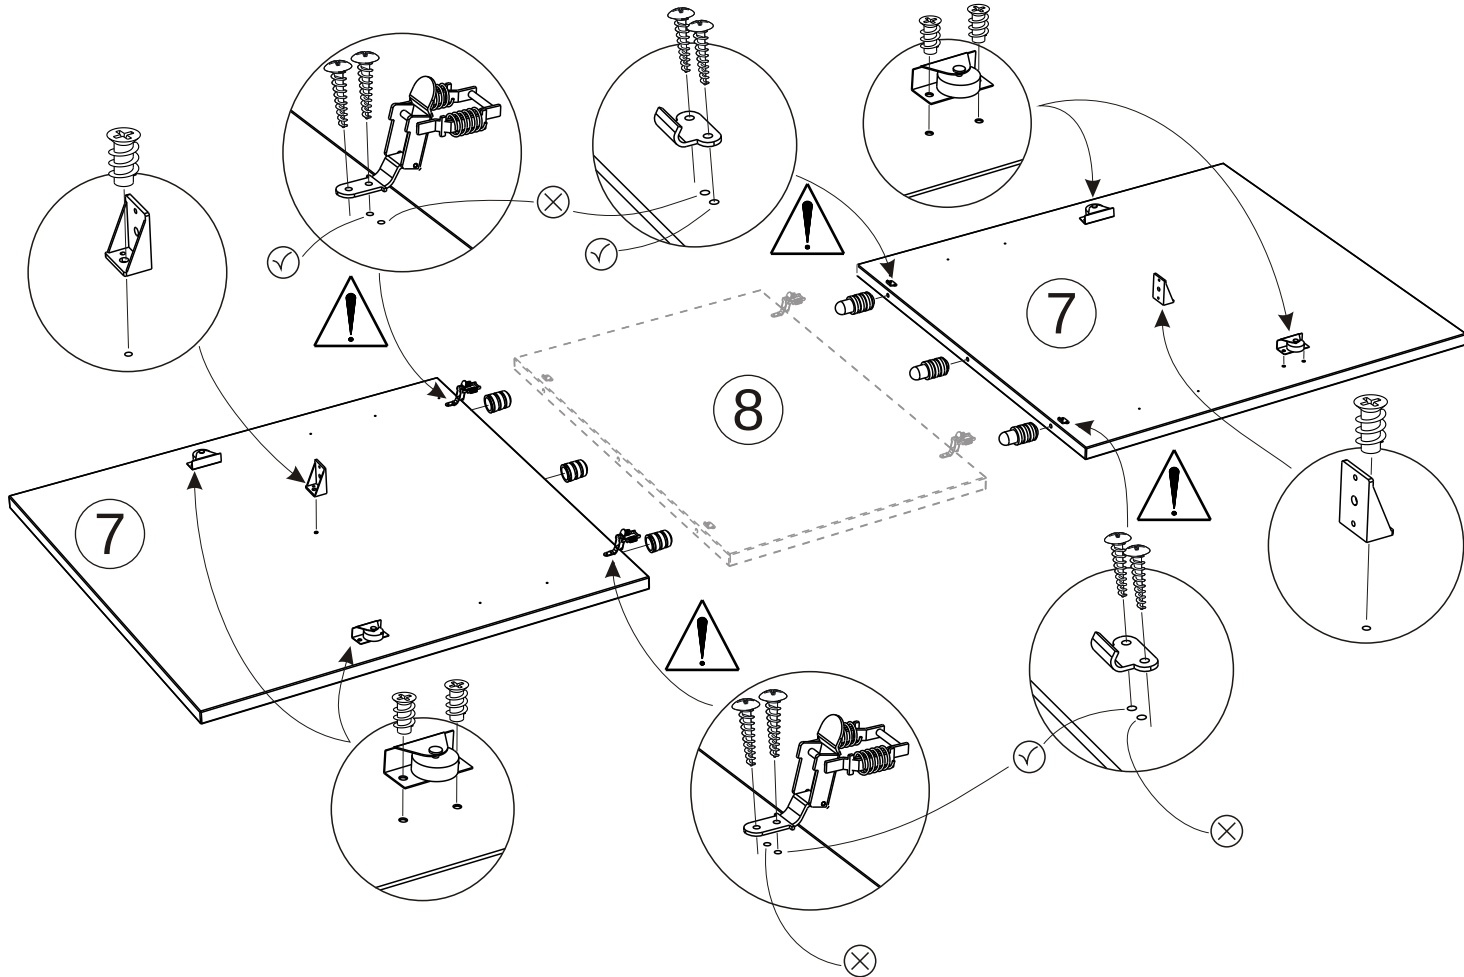

9	916	X12
	 4x13	

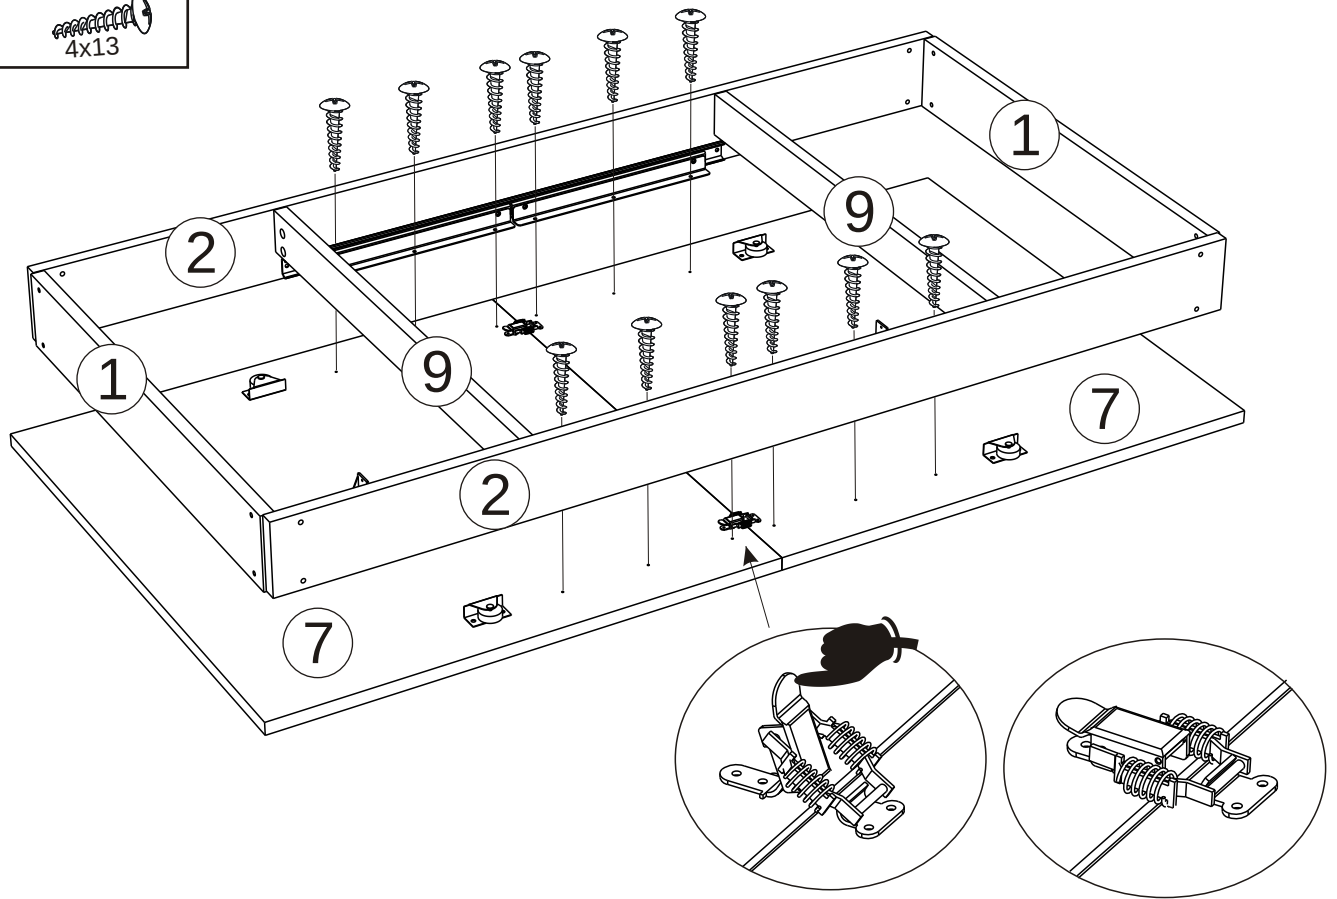


10	931	X16
	 M6*30	

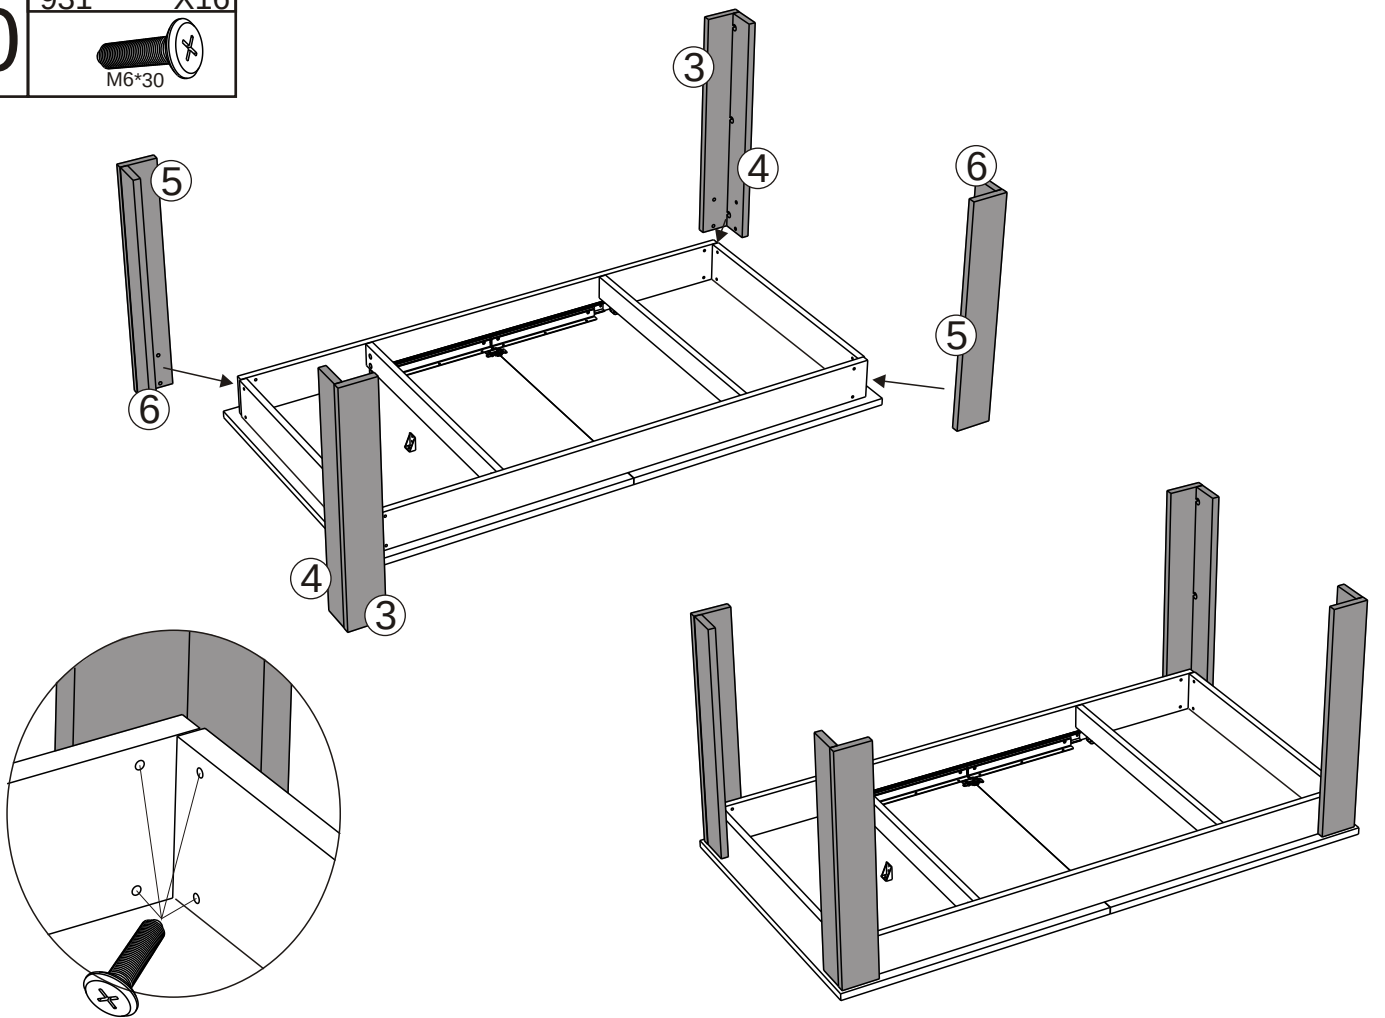


11


A

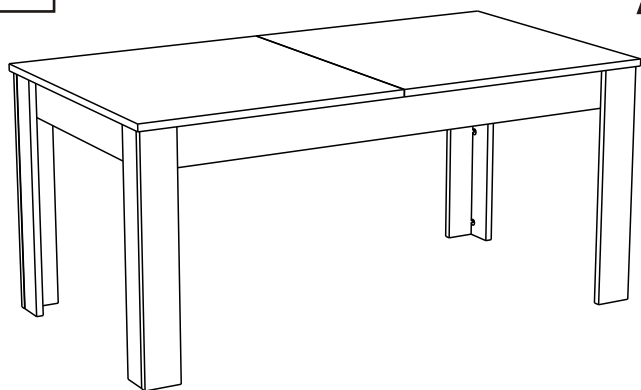


B

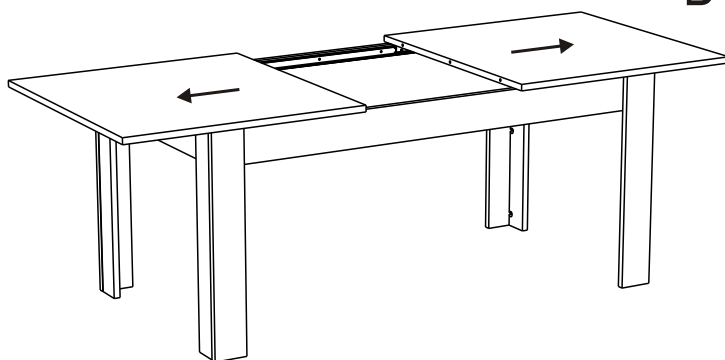


C

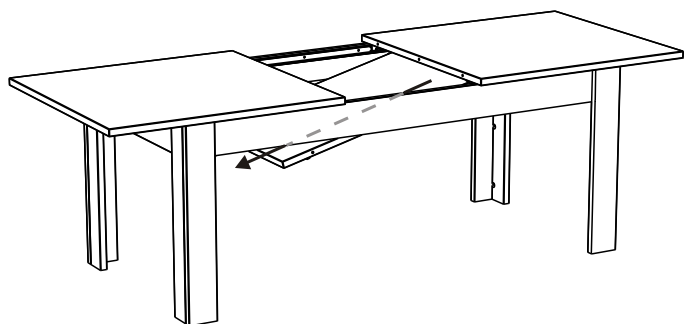


D

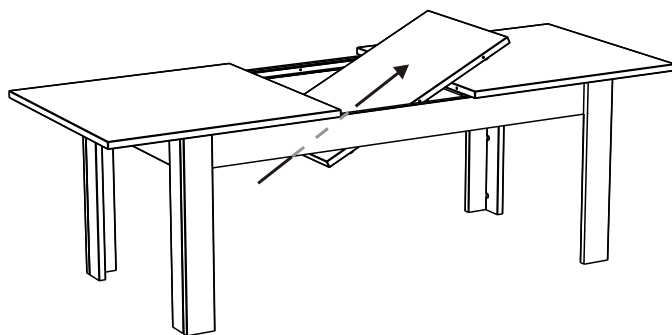

E

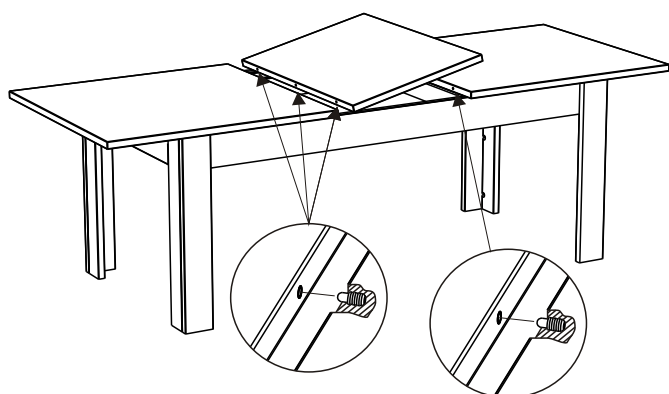

F

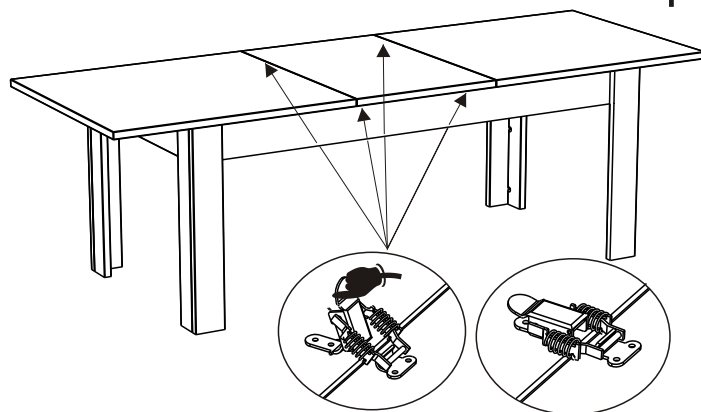

Info tri déchets

www.quefairedemesdechets.fr